


Prepare Workpiece:

1. Place the item to be blasted inside the cabinet.




2. Close the side gate by tightly by using the lock on the side.

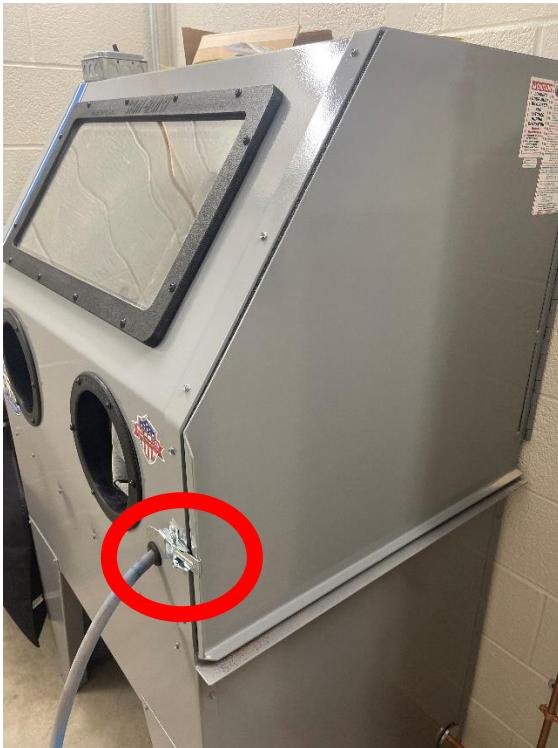

Begin Blasting:

1. Turn on the light and the vacuum pump by flipping the switch.

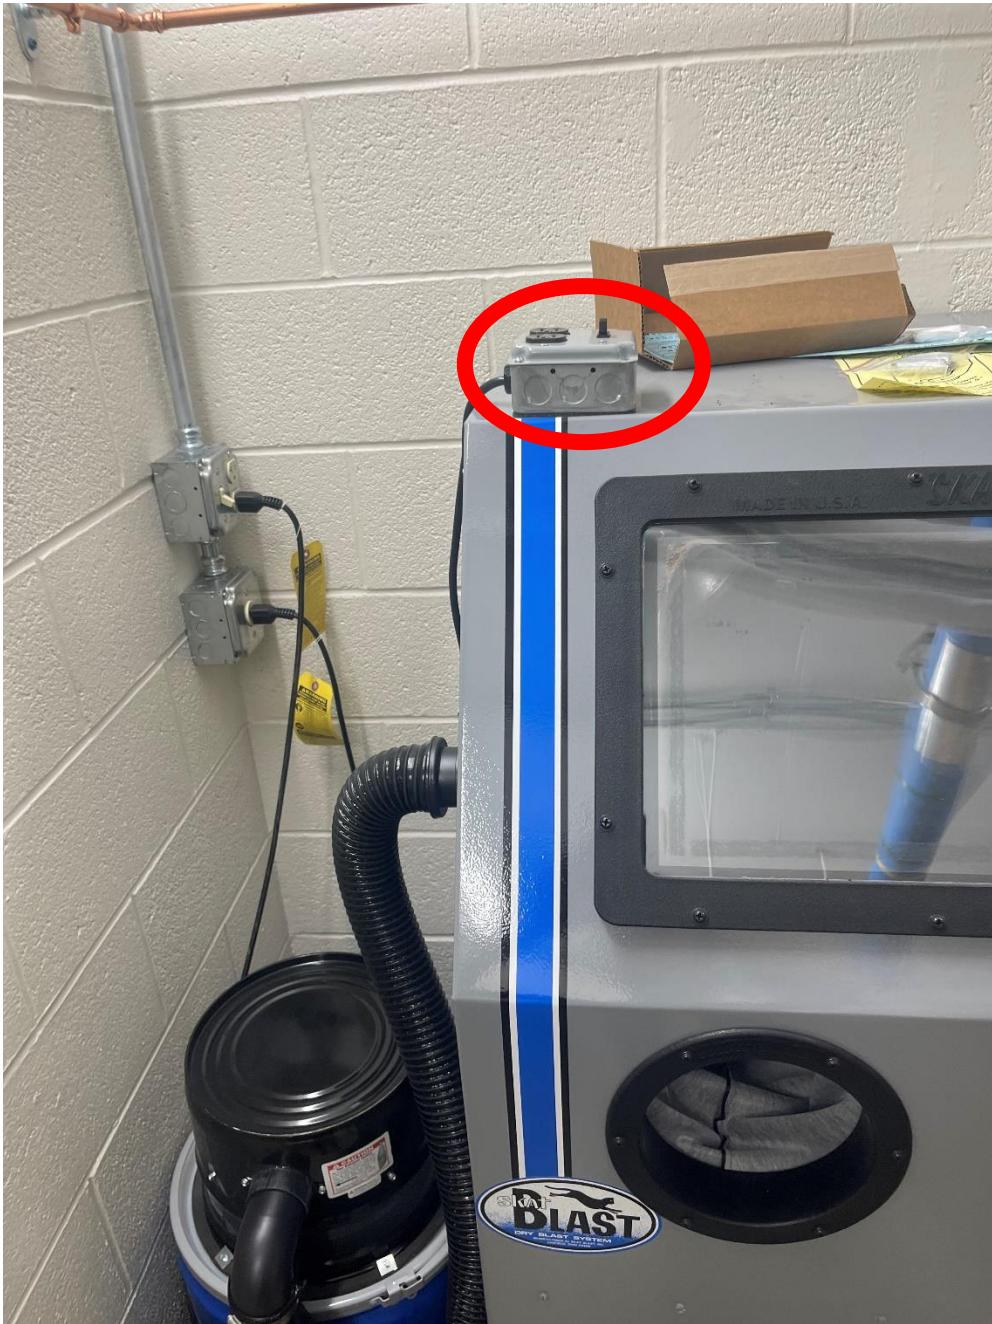

2. Insert your hands into the gloves attached to the cabinet.
3. Grasp the blasting gun and aim it toward the surface of the workpiece.
4. Activate the gun by placing one foot on the foot pedal (shown in the Figure below).



5. Keep stepping on the foot pedal and start blasting by pressing the trigger of the blasting gun.
6. Move the gun in smooth, overlapping motions to avoid over-blasting or uneven patterns.

Turn Off the Machine:

1. Release the foot pedal to stop the blasting process.
2. Open the cabinet to retrieve the workpiece once the air has cleared.
3. Turn off the light and the vacuum pump by flipping the switch.